

**Star Trac E-ST Stepper**

---

**OWNER'S MANUAL**



# TABLE OF CONTENTS


<b>Introduction</b>	<b>4</b>
About This Manual	4
<b>Safety Instructions</b>	<b>5</b>
English	5
Dutch	6
French	6
German	7
Italian	7
Portuguese	8
Spanish	8
Swedish	9
Chinese	9
Japanese	10
<b>Assembly and Setup</b>	<b>11</b>
Tools Required	11
Unpacking and Assembly	11
<b>Operating Instructions</b>	<b>15</b>
Display Panel Features	15
Soft Trac®	16
Hints and Tips for Getting Started	16
Viewing Workout Data During a Program	16
Pause Mode	17
Cooldown Cycle	17
Using the Personal Fan	17
Heart Rate Monitoring	18
Quick Start	18
Preset Programs	19
Heart Rate Control Programs	23
Fitness Test	25
<b>Preventative Maintenance</b>	<b>26</b>
Daily Maintenance	26
Weekly Maintenance	26
Monthly Maintenance	26
<b>Manager / Maintenance Mode</b>	<b>26</b>
Manager Mode	26
Maintenance Mode	27
<b>Troubleshooting</b>	<b>29</b>
Start-Up Service Messages	29
<b>Regulatory Information</b>	<b>29</b>
FCC and Other Domestic Regulations	29
Canadian DOC and Other Regulations	29
European Applications	29

Copyright 2005. Star Trac by Unisen, Inc. All rights reserved, including those to reproduce this book or parts thereof in any form without first obtaining written permission from Star Trac.

Every effort has been made to keep this information current; however, periodically, changes are made to the information herein, and these changes will be incorporated into new editions of this publication. All product names and logos are trademarks of their respective owners. Printed in the USA.

## **E-ST**

### **E Series Stepper**

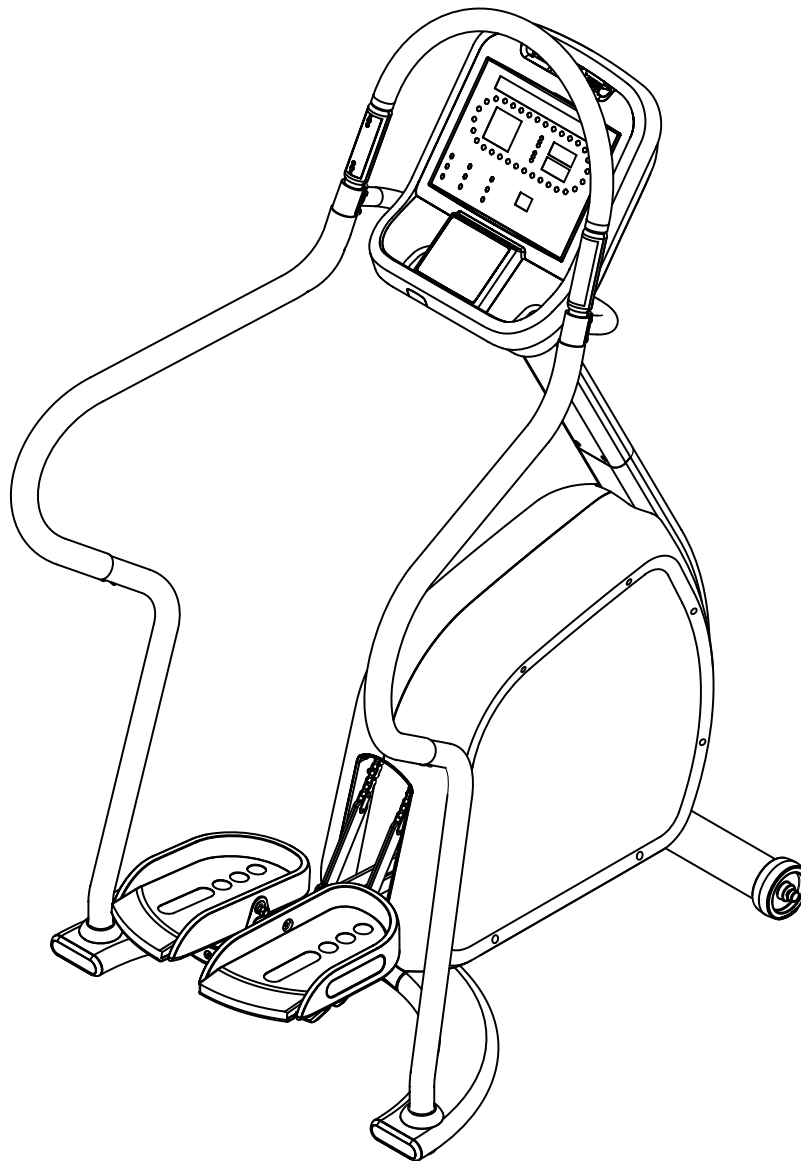

# INTRODUCTION

Thank you for choosing the **STAR TRAC E-ST STEPPER**. The Stepper has been designed to provide the user the most rewarding experience based upon the carefully planned features it possesses. The design elements of this product will provide you with a comfortable, intuitive, safe and reliable experience, guiding you to a habit-forming lifestyle. Our mission is to provide products to mold lifelong habits for health and fitness, and our Stepper will provide the path to meet your goals. Step to it!

## ABOUT THIS MANUAL

This manual is applicable to the **STAR TRAC E-ST STEPPER**. The manual is divided into eight sections, as follows:

### **Introduction**

Provides an overview of each section within the manual.

### **Safety Instructions**

Provides guidelines, in multiple languages, for safely operating the Stepper.

### **Assembly and Setup**

Provides instructions for unpacking, assembling and setting up the Stepper.

### **Operating Instructions**

Provides a detailed description of the Display Panel, and includes step-by-step instructions for operating the Stepper.

### **Preventative Maintenance**

Describes the preventative maintenance measures required to keep the Stepper in top condition.

### **Manager / Maintenance Mode**

Provides step-by-step instructions for changing universal parameters on the Stepper, and for performing built-in testing procedures.

### **Troubleshooting**

Describes the start-up and shutdown messages provided.

### **Regulatory Information**

Provides regulatory information for the Stepper.

# SAFETY INSTRUCTIONS

This chapter includes fitness safeguards and precautions for the installation and use of the **STAR TRAC E-ST STEPPER**. Please read this chapter carefully before installing or using your equipment.

Safety instructions are provided in the following languages (in the order shown):

- English
- Dutch
- French
- German
- Italian
- Portuguese
- Spanish
- Swedish
- Chinese
- Japanese

## PRECAUTIONS

These safety notes are directed to you as the owner of the **STAR TRAC E-ST STEPPER**. Please train all your users and fitness staff to follow these safety instructions.

### Do

- Do encourage each of your users to discuss their health program or fitness regimen with a healthcare professional.
- Do stop operating your Stepper if you feel dizzy or faint.
- Do perform regular preventative maintenance.
- Do exercise slowly until you reach a level of comfort.
- Do use the Stepper only for its intended use, as described in this manual.

### Do Not

- Do not let unsupervised children operate your Stepper.
- Do not use without athletic shoes.
- Do not use in rainy weather outdoors, or in an enclosed pool environment.
- Do not drop or insert any object, hands, or feet into any opening, or underneath your Stepper.
- Do not attempt to remove any shrouds or modify your Stepper.

## WARNING

Your **STAR TRAC E-ST STEPPER** is designed for aerobic exercise in a commercial or consumer environment. Please check with your physician prior to beginning any exercise program.

Do not push yourself to excess. Stop if you are feeling faint, dizzy, or exhausted. Use common sense when stepping.

Read the Owner's Manual in its entirety before operating your Stepper.

Failure to obey this warning can result in injury or death.

# ASSEMBLY AND SETUP

The following parts are included with the **STAR TRAC E-ST STEPPER**:


- E-ST STEPPER Base frame assembly
- Display Assembly
- Left and right side handrails (Note: Both handrails are the same)
- Hardware Kit 711-3182 includes:
  - 8 handrail screws PN 110-0506
  - 4 neck screws PN 110-3172
  - 5/32" Hex key PN 290-0040
- Owners Manual
- Warranty Card

## UNPACKING AND ASSEMBLY

**NOTE:** Inspect the shipping carton for any parts that may be missing **BEFORE** discarding the carton. Items can shift during transportation, and may be accidentally discarded with the carton. If any parts are missing, please contact Star Trac Support at 800-503-1221. Have the serial number of the Stepper, and the part number(s) of the missing parts ready so they may be shipped to you.


### 1. Unpack the Shipping Carton

Open the top of the Stepper Box, remove the handrail box (long, thin box at outside edge) place aside. Remove Display assembly and place aside. Remove remaining packing material, and carefully remove from pallet base.

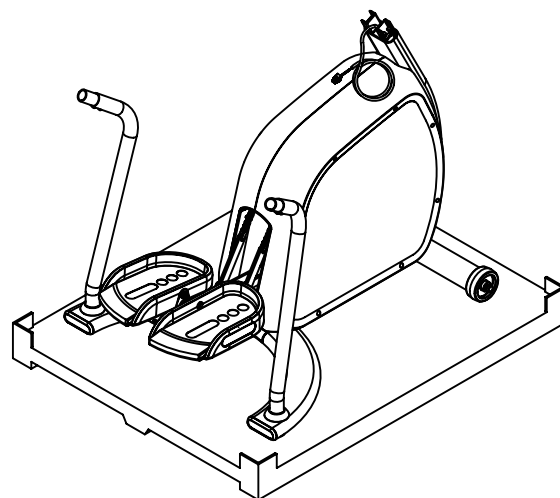

### 2. Open Display


Remove (2) M4 x 0.7 screws from back of display (retain for later use) with a #2 Phillips screwdriver and separate the back of the display from the front.

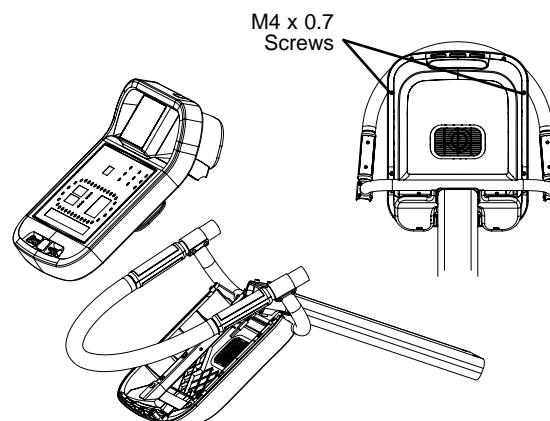


### 3. Install the Display Assembly

(a) Take upper display to the front of the Stepper. Feed the cables from the lower neck through the upper neck. Take care not to damage the display or handlebar on the ground.


Note: This step may require two people.

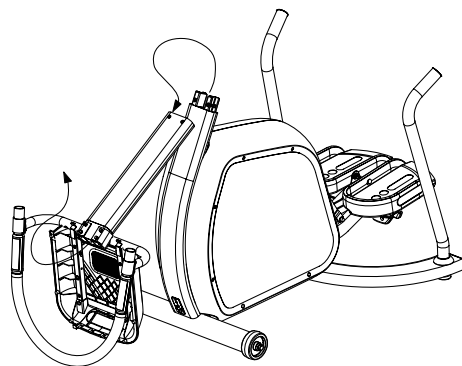


(b) Keep hold of the cables and rotate the display up. Now slide the neck over the two mount in the lower neck, take special care not to pinch the cables or your finger when the two pieces come together.

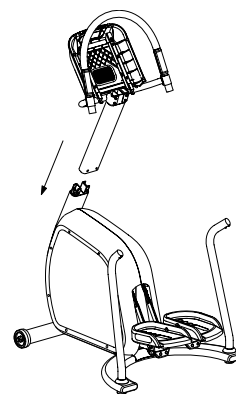


(c) Thread in (4) M6 x 16 Flat Head Screws in the front and back of the neck where the two pieces came together. Use a 5/32 hex key to tighten the screws to 60 lb-in (6.7 N-m) of torque.

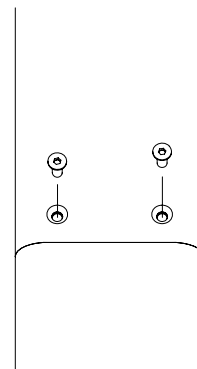


(d) 1st Slide handrail on to upper display mount. Rotate until bottom of handrail is near lower frame. 2nd With some force lift handrail until opening at the bottom of the handrail is able to slide over lower frame.

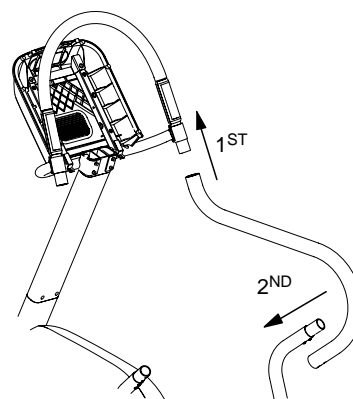

(e) Use a 5/32" Hex Key and thread into the handrail (2) 1/4-28 x 3/8" Button Head Screws into the upper handrail. Then tighten each screw to 110 lb-in (12.4 N-m) of torque.

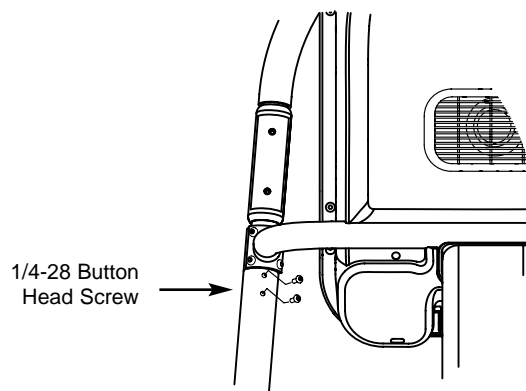


(f) Use a 5/32" Hex Key and thread into the handrail (2) 1/4-28 x 3/8" Button Head Screws into the lower handrail. Then tighten each screw to 110 lb-in (12.4 N-m) of torque.

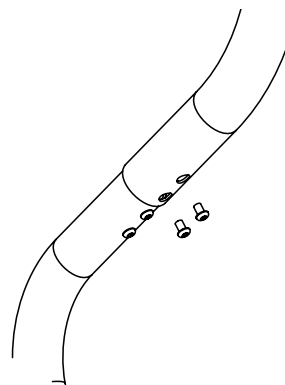


(g) Repeat steps 3(d) - 3(f) for other side.

**NOTE:** If you are installing the STAR TRAC PVS entertainment system, Refer to the PVS Install guide before you perform this step. If you are not installing the PVS then take the Coax and the DC power cables and return them back down the neck.

(h) Plug in the 12 pin display cable from the neck into the front display circuit board at J4. Next plug in the Heart Rate cable from the handlebars into the HR board, then plug the HR ground into the quick disconnect tab on the display frame.

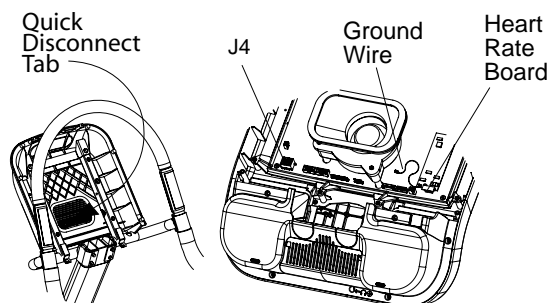


(i) 1st Slide the bottom of the front display under the 2 tabs at the base the the mount. 2nd Press display against the round bar and rotate it to the back. Careful not to pinch any wires.

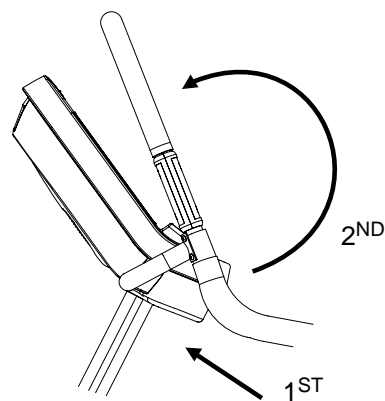




Secure the Front display to the back with (8) M4 x 0.7 x 19mm long Phillips Head Screws.

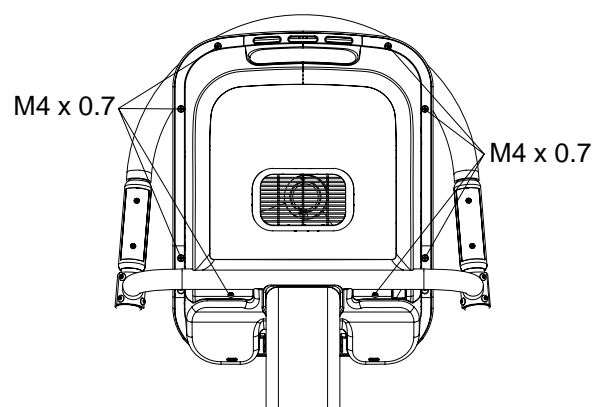

#### 4. Final Assembly and Testing

Check all screws to ensure they are tightened securely.

Adjust leveling feet to assure that the Stepper is level to the floor and does not rock back and forth. Pedal unit to check for proper operation. Check to see that all screws are tight.

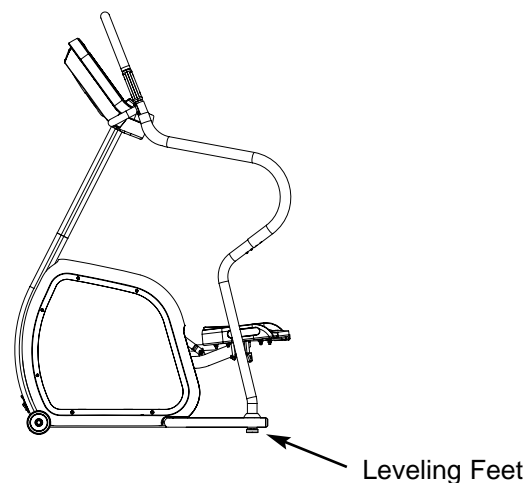

Make sure the side handrails are tight.

Mount the Stepper, begin stepping, and verify that the display panel turns on.

Operate the unit to check for proper operation.

You have now completed assembly of your **STAR TRAC E-ST STEPPER**.

# OPERATING INSTRUCTIONS

Operating the **STAR TRAC E-ST STEPPER** is very easy. Simply mount the Stepper by stepping on the **Soft Trac®** pedals, begin stepping, and press **QUICK START**. Learning the features and incorporating the **STAR TRAC E-ST STEPPER** into your members' fitness programs is just as easy. In this chapter, you will learn the display functions and how to get the most out of every **STAR TRAC E-ST STEPPER** workout.

**IMPORTANT:** Before operating the Stepper, you must be familiar with the following equipment limitations:

- **Maximum Weight:** Your **STAR TRAC E-ST STEPPER** is designed for a maximum user weight of 350 lbs/158 kg. **DO NOT** exceed the maximum user weight.


## DISPLAY PANEL FEATURES

Your **STAR TRAC E-ST STEPPER** is equipped to provide you and your users unlimited exercise opportunities. Experiment with its features to find the right combination for your fitness regimen. The Display Panel provides the operating controls and display elements described in the following paragraphs.



**QUICK START Key:** Enables the Stepper for manual operation using a default weight as set in Manager/Maintenance Mode, a default **LEVEL** of "1", and a default time limit as set in Manager/Maintenance Mode.

**NOTE:** Default time and weight are adjustable through Manager/Maintenance Mode.

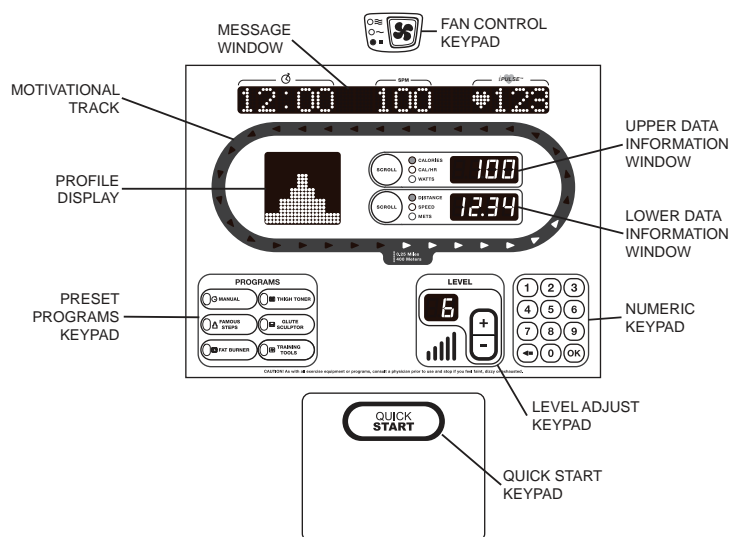

**Numeric Keypad:** Allows you to enter specific values for program parameters during program setup. During a program, these keys may be used to change difficulty level.



**OK Key:** (part of numeric keypad) Allows you to confirm selections during program setup and operation.



**ARROW Key:** (part of numeric keypad) Allows you to make corrections to values entered during program setup.



**Increase LEVEL Key:** Increases the difficulty level, in one-level increments; levels are from **1** (least difficult) to **20** (most difficult). Current level setting is shown in the **LEVEL** display window.



**Decrease LEVEL Key:** Decreases the difficulty level from **20** (greatest difficulty) to **1** (least difficulty), in one-level increments. Current level setting is shown in the **LEVEL** display window.

**NOTE:** During program setup and while in Manager/Maintenance Mode, the **Increase LEVEL** and **Decrease LEVEL** keys increment or decrement the value shown in the Information Window.



**Fan Key:** Allows you to control the speed of the personal cooling fan, either **OFF**, **HIGH** or **LOW**.



**SCROLL Keys:** Scrolls the upper and lower data information windows between the three available data displays.

**Preset Program Keys:** Allow you to access a desired preset workout program.

**Upper Data Information Window:** Shows current and aggregate data related to your workout. Pressing the associated SCROLL key scrolls between the following displays:

- CALORIES - Shows your aggregate caloric expenditure thus far in your workout.
- CAL/HR - Shows your current caloric expenditure per hour based on your current difficulty level and stepping rate.
- WATTS - Shows your current watts expenditure at that specific time during your workout.

**NOTE:** Press the SCROLL key to toggle between data during your workout.

**Lower Data Information Window:** Shows current and aggregate data related to your workout. Pressing the associated SCROLL key scrolls between the following displays:

- DISTANCE - Shows the total number of vertical feet or meters you have climbed thus far.
- SPEED - Shows the speed at which you are currently stepping, in steps-per-minute.
- METS - Shows your current METS expenditure at that specific time during your workout.

**NOTE:** Press the SCROLL key to toggle between data during your workout.

**Graphic Display:** Traces your progress through each of the programs and allows you to anticipate changes in difficulty. Display elements illuminate from left to right across the bottom of the display to indicate your progress through the course. At each step, display elements illuminate in columns to indicate your ascent up the gradient that is in effect.

**Motivational Track:** Shows your progress counter-clockwise around a 10-floor course, starting from the bottom center.

**Information Window:** Provides informational messages, prompts during program setup, feedback during your workout, notification when your workout is complete, and scrolling summarized workout data after your workout. During your workout, the Information Window shows the following data:

- TIME - Shows the duration of your workout thus far in minutes and seconds.
- FLOORS - Shows the total number of floors you have climbed thus far.
- HEART RATE - Shows your current heart rate in beats-per-minute (BPM) while wearing a heart rate strap or grasping the heart rate grips.

Depending on the program completed and Stepper settings as set in Manager/Maintenance Mode, workout data may include:

- |   |                                      |
|---|--------------------------------------|
| ■ Time elapsed                                | ■ Average calories expended per hour |
| ■ Calories expended                           | ■ Average watts                      |
| ■ Distance traveled - vertical feet or meters | ■ Average METS                       |
| ■ Floors climbed                              | ■ Average heart rate                 |
| ■ Average speed - steps per minute            |                                      |

## SOFT TRAC® SYSTEM

The **Soft Trac®** system is the Stepper's foot comfort and step absorption system consisting of a yielding, durable rubber pad covering both foot pedals. This system is designed to protect ankles, knees, joints, and back while reducing numbness in toes and feet and providing a comfortable stepping surface. Whether you place your feet at the front, middle, or rear of the pedals you will enjoy the benefits of the **Soft Trac®** system.

## HINTS AND TIPS FOR GETTING STARTED

The following hints and tips will assist in training your users to maximize the fitness benefits of your **STAR TRAC E-ST STEPPER**.

- **Step at a rate that feels comfortable and most natural, yet is sufficient to achieve a good cardio workout.**
- **Try different stepping rhythms.** In manual operation, vary your stepping speed from slow to fast, then back to slow. As you become more comfortable with your Stepper, try stepping faster, varying the difficulty LEVEL, or using the preset programs.
- **Watch the Graphic Display to anticipate changes in difficulty.** When you use the preset programs, the display shows changes in difficulty as tall or short columns.

## VIEWING WORKOUT DATA DURING A PROGRAM

Workout data is shown in three windows on the Stepper Display Panel: the Information Window (located at the top of the Display Panel) and the Upper and Lower Data Information Windows (located inside the Motivational Track, to the right of the Graphic Display).

Information shown in the Information Window during a workout includes elapsed time, number of floors climbed, and heart rate (HR), when in use. After the workout is complete, workout summary information is shown in the Information Window.

The Information Window also displays important instructions and cues throughout the workout.

The Upper and Lower Data Information Windows also display information during a workout.

### To view workout data during your workout:

1. Press the Upper Data Information Window **SCROLL** key to view the following workout data (the current data display is indicated by an LED next to the parameter name):
  - **CALORIES** - Shows your aggregate caloric expenditure thus far in your workout.
  - **CAL/HR** - Shows your current caloric expenditure per hour based on your current difficulty level and stepping rate.
  - **WATTS** - Shows your current watts expenditure at that specific time during your workout.**NOTE:** Press the **SCROLL** key to toggle between data during your workout.
2. Press the Lower Data Information Window **SCROLL** key to view the following workout data (the current data display is indicated by an LED next to the parameter name):
  - **DISTANCE** - Shows the total number of vertical feet or meters you have climbed thus far.
  - **SPEED** - Shows the speed at which you are currently stepping, in steps-per-minute.
  - **METS** - Shows your current METS expenditure at that specific time during your workout.

## PAUSE MODE

If you come to a complete stop during your workout (SPM is less than 10), the Stepper will enter a “pause” mode. To continue your workout, begin stepping before the “pause” timer expires and your workout data will not be lost.

## COOLDOWN CYCLE

Once you have completed your workout, the Stepper enters a two-minute Cooldown cycle.

**NOTE:** The Stepper software is programmed to properly decrease difficulty level to provide a cooldown.


### To operate the Stepper during Cooldown:

1. You can adjust the difficulty **LEVEL** during Cooldown.
  - Use the **0...9** keys to enter a difficulty **LEVEL** (from 1 to 20); or press the **▲** or **▼** key, as desired, to increase or decrease the difficulty **LEVEL** in 1 unit increments.
  - When the desired difficulty **LEVEL** has been entered by using the **0...9** keys, press the **OK** key to accept the displayed **LEVEL**.
2. When the Cooldown cycle ends, your workout summary displays in the Information Window. If you wish to exit the Cooldown cycle before it ends automatically, stop stepping.

## USING THE PERSONAL FAN

The **STAR TRAC E-ST STEPPER** is equipped with a built-in personal fan to increase your comfort during a workout. You can control the fan speed during your workout.

### To operate the personal fan:

- Press the  key, as necessary, to cycle the personal fan from OFF to HIGH to LOW to OFF. An LED indicator lights to show the currently selected fan speed.
- The fan remains set at the set speed if you pause your program, unless your workout was less than two minutes in length.
- The fan turns off automatically if you exit your workout, or when you complete your workout program.
- The fan turns off automatically if you pause your program and the time elapsed is less than two minutes.

## HEART RATE MONITORING

Heart rate monitoring allows you to determine if your workout is too challenging or not challenging enough. Monitoring your heart rate is easy with the **STAR TRAC E-ST STEPPER**. You may use a heart rate strap, or you can simply grasp the silver contact heart rate grips. Your goal will be to keep your exercise heart rate between 60 and 90 percent of the theoretical maximum for your age, as shown in the accompanying Target Heart Rate table.

**NOTE:** The Heart Rate monitor is not a medical test, nor is it designed as a medical test. It is simply a guide to target heart rate training. Please consult with your physician prior to engaging in any strenuous physical activity.

**NOTE:** If both the heart rate grips and a heart rate strap are being used, the heart rate grips will override and be displayed in the HR window.

**IMPORTANT:** The manufacturer does not warrant the heart rate system **performance** on this product, as the heart rate system performance varies, based on a user's physiology, fitness level, age, method of use and other factors. Furthermore, the heart rate system is not for medical use.



To calculate your training zone, use the following formulas:  
(theoretical max HR = 220 - Age)

### Heart Rate Training Range Upper Level

$$\frac{\text{Your Theoretical Max}}{\text{Training Range Upper Limit}} \times 0.90 =$$



### Heart Rate Training Range Lower Level

$$\frac{\text{Your Theoretical Max}}{\text{Training Range Lower Limit}} \times 0.60 =$$

**NOTE:** Calculating your theoretical maximum heart rate using age is an approximation. For more information, please contact a fitness professional or doctor.


## CONTACT HEART RATE MONITORING

You may use the heart rate contact grips to automatically check your heart rate while stepping. Just follow these steps.

1. Grasp the stainless steel heart rate contact grips; you do not have to squeeze tightly.
  - When the heart rate contact grips are grasped, the  will display and an audible "beep" will sound to indicate that a heart rate has been detected.
2. It may take from 30 to 60 seconds for the heart rate system to acquire and display your heart rate.
3. When your heart rate has been acquired, the  indicator and your heart rate in beats per minute (BPM) display in the HEART RATE field of the Information Window.
4. Release the Heart Rate grips if you wish to remove your heart rate reading from the display.

## CHEST STRAP HEART RATE MONITORING

You may use the heart rate strap to automatically check your heart rate. Just follow these steps:

1. Before beginning your workout, or during a pause, moisten the back of the transmitter on the heart rate strap. Place the strap snugly around your chest with the transmitter resting directly over your sternum.
2. When your heart rate has been acquired, the  indicator and your heart rate in beats per minute (BPM) display in the HEART RATE field of the Information Window.
3. Remove the heart rate strap if you wish to remove your heart rate reading from the display.

**NOTE:** The performance of the transmitter may be affected by body types, body oils, metal in clothing, and outside electrical interference. Always be sure that the transmitter and skin are in good contact. Avoid operating other electrical equipment near your Stepper when you use the heart rate strap.

## QUICK START

QUICK  
START







Quick Start lets you begin your workout by simply pressing one key, or by stepping for approximately 13 seconds without pressing any key. Quick Start uses a default weight as set in Manager/Maintenance Mode, a difficulty LEVEL of 1, and a time limit as set in Manager/Maintenance Mode. YOU control resistance LEVEL during the entire program.

To operate the Quick Start program:

1. Mount the Stepper, begin stepping, and press the QUICK START key.
2. If desired, you can use the personal fan during your workout (see “Using the Personal Fan” for details).
3. You can adjust the difficulty LEVEL during the program, using either of the following methods.
  - Use the 0...9 keys to enter a difficulty LEVEL (from 1 to 20). When the desired level has been entered, press the OK key to confirm the difficulty LEVEL.
  - Press the ▲ or ▼ key, as desired, to increase or decrease the difficulty LEVEL in 1 unit increments.
4. You can scroll through workout data during the program (see “Viewing Workout Data During a Program” for details).
5. If you wish to pause the program, stop stepping. The Stepper will enter pause mode and display your workout results for one entire cycle.
6. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see “Cooldown Cycle” for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire. If you wish to skip the Cooldown cycle, press the OK key to view your workout summary.

## PRESET PROGRAMS


The **STAR TRAC E-ST STEPPER** offers 8 preset programs to add variety and challenge to your workout. Additionally, the HR TRAINING feature lets you select one of two cardio-intensive training programs, or a Fitness Test.

 MANUAL	Pre-set programs include:
 FAT BURNER	Allows the user to pre-program a time goal and user weight. Difficulty is determined by the user during the program.
 THIGH TONER	Provides a high intensity interval workout.
 GLUTE SCULPTOR	Provides a workout designed to target the thigh muscles.
 FAMOUS STEPS	Provides a workout designed to target the gluteal muscles.
 TRAINING TOOLS	Provides a motivational workout in which the user can climb one of nine famous landmarks.
	Advanced programs that offer the user the ability to train in specific HR zones, or perform a Fitness Test.
	<b>NOTE:</b> When entering setup data for any program, if the OK key is not pressed, the system will “auto-advance” through the prompts.

## MANUAL PROGRAM

The MANUAL program allows the user to pre-program a time goal, difficulty LEVEL and user weight. Difficulty LEVEL can be adjusted by the user during the program.

### To operate the MANUAL program:


1. Mount the Stepper, begin stepping, and press the  MANUAL key.
2. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the 0...9 keys to enter your current weight; or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the OK key to accept the displayed value.
3. You are prompted to enter a time goal. The default time is 20 minutes, or equal to the time parameter set in Manager/Maintenance Mode if less than 20 minutes. You may enter any time from 1 to 99 minutes.
  - Use the 0...9 keys to enter your desired time goal; or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed value in 1 minute increments.
  - When your desired goal has been entered, press the OK key to accept the displayed value.
4. You are prompted to enter a difficulty LEVEL.

- Use the 0...9 keys to enter a difficulty LEVEL (from 1 to 20) or press the ▲ or ▼ key, as desired, to increase or decrease the difficulty LEVEL in 1 unit increments.
  - When the desired difficulty LEVEL has been entered, press the OK key to accept the displayed LEVEL.
5. If desired, you can use the personal fan during your workout (see “Using the Personal Fan” for details).
  6. You can adjust the difficulty LEVEL during the program, using either of the following methods:
    - Use the 0...9 keys to enter a difficulty LEVEL (from 1 to 20). When the desired level has been entered, press the OK key to confirm the difficulty LEVEL.
    - Press the ▲ or ▼ key, as desired, to increase or decrease the difficulty LEVEL in 1 unit increments.
  7. You can scroll through workout data during the program (see “Viewing Workout Data During a Program” for details).
  8. If you wish to pause the program, stop stepping. The Stepper will enter pause mode and display your workout results for one entire cycle.
  9. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see “Cooldown Cycle” for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire.

## FAT BURNER PROGRAM

The FAT BURNER program provides a high intensity interval workout.

### To operate the program:


















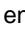

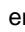


1. Mount the Stepper, begin stepping, and press the  key.
2. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the 0...9 keys to enter your current weight; or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the OK key to accept the displayed value.
3. You are prompted to enter a time goal. The Stepper displays a default time of 20 minutes, or equal to the time parameter set in Manager/Maintenance Mode if less than 20 minutes. You may enter any time from 1 to 99 minutes.
  - Use the 0...9 keys to enter the desired time goal, or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed value in 1 minute increments.
  - When your desired time goal has been entered, press the OK key to accept the displayed value.
4. You are prompted to enter a difficulty LEVEL.
  - Use the 0...9 keys to enter a difficulty LEVEL (from 1 to 20) or press the ▲ or ▼ key, as desired, to increase or decrease the difficulty LEVEL in 1 unit increments.
  - When the desired difficulty LEVEL has been entered, press the OK key to accept the displayed LEVEL.
5. If desired, you can use the personal cooling fan during your workout (see “Using the Cooling Fan” for details).
6. You can adjust the difficulty LEVEL during the program using either of the following methods:
  - Use the 0...9 keys to enter a difficulty LEVEL (from 1 to 20). When the desired difficulty LEVEL has been entered, press the OK key to confirm the difficulty LEVEL.
  - Press the ▲ or ▼ key, as desired, to increase or decrease the difficulty LEVEL in 1 unit increments.
7. You can scroll through workout data during the program (see “Viewing Workout Data During a Program” for details).
8. If you wish to pause the program, stop stepping. The Stepper will enter pause mode and display your workout results for one entire cycle.
9. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see “Cooldown Cycle” for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire.

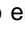

## GLUTE SCULPTOR PROGRAM

The GLUTE SCULPTOR program provides a workout designed to target your gluteal muscles. For best results while using the GLUTE SCULPTOR program, stand up straight while stepping, and take long steps.











### To operate the GLUTE SCULPTOR program:

1. Mount the Stepper, begin stepping, and press the  key.
2. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the ... keys to enter your current weight; or press the  or  key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the  key to accept the displayed value.
3. You are prompted to enter a time goal. The Stepper displays a default time of 20 minutes, or equal to the time parameter set in Manager/Maintenance Mode if less than 20 minutes. you may enter any time from 1 to 99 minutes.
  - Use the ... keys to enter the desired time goal, or press the  or  key, as necessary, to increase or decrease the displayed value in 1 minute increments.
  - When your desired time goal has been entered, press the  key to accept the displayed value.
4. You are prompted to enter a difficulty LEVEL.
  - Use the ... keys to enter a difficulty LEVEL (from 1 to 20) or press the  or  key, as necessary, to increase or decrease the difficulty LEVEL in 1 unit increments.
  - When the desired difficulty LEVEL has been entered, press the  key to confirm the difficulty LEVEL.
5. If desired, you can use the personal fan during your workout (see "Using the Personal Fan" for details).
6. You can adjust the difficulty LEVEL during the program, using either of the following methods:
  - Use the ... keys to enter a difficulty LEVEL (from 1 to 20). When the desired level has been entered, press the  key to confirm the difficulty LEVEL.
  - Press the  or  key, as necessary, to increase or decrease the difficulty LEVEL in 1 unit increments.
7. You can scroll through workout data during the program ( see "Viewing Workout Data During a Program" for details).
8. If you wish to pause the program, stop stepping. The Stepper will enter a pause mode and display your workout results for one entire cycle.
9. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see "Cooldown Cycle" for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire. If you wish to skip the Cooldown cycle, press the  key to view your workout summary.

## THIGH TONER PROGRAM

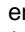The THIGH TONER program provides a workout designed to target your thigh muscles. For best results while using the THIGH TONER program, lean forward slightly while stepping, and take short steps.

### To operate the THIGH TONER program:

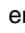1. Mount the Stepper, begin stepping, and press the  key.
2. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the ... keys to enter your current weight; or the  or  key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the  key to accept the displayed value.
3. You are prompted to enter a time goal. The Stepper displays a default time of 20 minutes, or equal to the time parameter set in Manager/Maintenance Mode if less than 20 minutes. you may enter any time from 1 to 99 minutes.
  - Use the ... keys to enter the desired time goal, or press the  or  key, as necessary, to increase or decrease the displayed value in 1 minute increments.



- When your desired time goal has been entered, press the **OK** key to accept the displayed value.
- 4. You are prompted to enter a difficulty LEVEL.
  - Use the **0...9** keys to enter a difficulty LEVEL (from 1 to 20) or press the **▲** or **▼** key, as necessary, to increase or decrease the difficulty LEVEL in 1 unit increments.
  - When the desired difficulty LEVEL has been entered, press the **OK** key to confirm the difficulty LEVEL.
- 5. If desired, you can use the personal fan during your workout (see "Using the Personal Fan" for details).
- 6. You can adjust the difficulty LEVEL during the program, using either of the following methods:
  - Use the **0...9** keys to enter a difficulty LEVEL (from 1 to 20). When the desired level has been entered, press the **OK** key to confirm the difficulty LEVEL.
  - Press the **▲** or **▼** key, as necessary, to increase or decrease the difficulty LEVEL in 1 unit increments.
- 7. You can scroll through workout data during the program ( see "Viewing Workout Data During a Program" for details).
- 8. If you wish to pause the program, stop stepping. The Stepper will enter a pause mode and display your workout results for one entire cycle.
- 9. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see "Cooldown Cycle" for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire. If you wish to skip the Cooldown cycle, press the **OK** key to view your workout summary.

## FAMOUS STEPS PROGRAM

The FAMOUS STEPS program provides a motivational workout in which you can climb one of nine famous landmarks.

### To operate the FAMOUS STEPS program:

1. Mount the Stepper, begin stepping, and press the **FAMOUS STEPS** key.
2. You are prompted to choose a famous landmark to climb. The Information Window shows the number and name of the current landmark. The Graphic Display shows the number of steps required to climb the landmark. The list of landmarks is cycled in the Information window until a landmark is chosen. Use the **0...9** keys to select the landmark you wish to climb, or press the **OK** key to select the currently displayed landmark. Details for each landmark are as follows:

Number	Name	Steps
1	Leaning Tower of Pisa	293
2	Taj Mahal	360
3	Great Pyramid	720
4	Space Needle	915
5	Petronas Towers	1,318
6	Empire State Building	1,576
7	CN Tower	1,776
8	Sears Tower	2,232
9	Eiffel Tower	2,731

**N O T E :**

The number of steps for each landmark is based on the actual number of stairs for the landmark (if the information is available). If the number of steps is not available, or if the landmark does not have stairs leading to the top, the number of steps is based on the overall height of the landmark. The number of steps is calculated based on fifteen 8-inch stairs for each 10 vertical feet of height.

3. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the **0...9** keys to enter your current weight; or press the **▲** or **▼** key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When you correct weight has been entered, press the **OK** key to accept the displayed value.
4. You are prompted to enter a difficulty LEVEL.

- Use the  $\odot \dots \ominus$  keys to enter a difficulty LEVEL (from 1 to 20) or press the  $\Delta$  or  $\nabla$  key, as necessary, to increase or decrease the difficulty LEVEL in 1 unit increments.
  - When the desired difficulty LEVEL has been entered, press the  $\odot$  key to confirm the difficulty LEVEL.
5. If desired, you can use the personal fan during your workout (see "Using the Personal Fan" for details).
  6. You can adjust the difficulty LEVEL during the program, using either of the following methods:
    - Use the  $\odot \dots \ominus$  keys to enter a difficulty LEVEL (from 1 to 20). When the desired level has been entered, press the  $\odot$  key to confirm the difficulty LEVEL.
    - Press the  $\Delta$  or  $\nabla$  key, as necessary, to increase or decrease the difficulty LEVEL in 1 unit increments.
  7. You can scroll through workout data during the program ( see "Viewing Workout Data During a Program" for details).
  8. If you wish to pause the program, stop stepping. The Stepper will enter a pause mode and display your workout results for one entire cycle.
  9. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see "Cooldown Cycle" for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire. If you wish to skip the Cooldown cycle, press the  $\odot$  key to view your workout summary.

## HEART RATE CONTROL PROGRAMS

TRAINING TOOLS offers both an Interval Heart Rate Control program and a Constant Heart Rate Control program, as well as a Fitness Test.

**NOTE:** For best results, use a heart rate strap. If user is wearing a heart rate strap, the Stepper will automatically use the data from the heart rate strap. Contact heart rate grips may not give an accurate heart rate.

### To operate the INTERVAL HEART RATE Control program:

This heart rate feature is designed to gradually elevate your heart rate to the upper end of your selected training range, then gradually decrease your heart rate to the lower end of your selected training range by dynamically controlling the difficulty level. During the workout, this cycle will repeat several times until the time goal is complete, creating an interval training effect that is customized to the user's desired heart rate training range.

During program setup, there must be at least an 20 BPM difference between the lower heart rate limit and upper heart rate limit to ensure an interval workout.

By including interval exercise in your regular aerobic program, greater effects are noticed. Your heart and muscles will adapt to the increases in demand by utilizing stored calories for energy more effectively. Interval Heart Rate Control may potentially result in more calories expended. It will strengthen the heart, provide stress relief and variety to a workout. This program is more effective in training the body to remove excess lactic acid from the muscles.



#### Target Heart Rate Table

To calculate your training zone, use the following formulas:  
(theoretical max HR = 220 - Age)

##### Heart Rate Training Range Upper Level

$$\text{Your Theoretical Max} \times 0.75 = \text{Training Range Upper Limit}$$

##### Heart Rate Training Range Lower Level

$$\text{Your Theoretical Max} \times 0.60 = \text{Training Range Lower Limit}$$

Your Theoretical Max Training Range Lower Limit


**NOTE:** Calculating your theoretical maximum heart rate using age is an approximation. For more information, please contact a fitness professional or doctor.


1. Mount the Stepper, begin stepping, and press the  $\odot$  TRAINING TOOLS key.
2. You are prompted to select the desired HR TRAINING program. Press the  $\odot$  key to select Interval Heart Rate Control.
3. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the  $\odot \dots \ominus$  keys to enter your current weight; or press the  $\Delta$  or  $\nabla$  key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the  $\odot$  key to accept the displayed value.
4. You are prompted to enter a time goal. The Stepper displays a default time of 20 minutes, or equal to the time parameter set in Manager/Maintenance Mode if less than 20 minutes. You may enter any time from 1 to 99 minutes.

- Use the 0...9 keys to enter the desired time goal, or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed value in 1 minute increments.
  - When your desired time goal has been entered, press the OK key to accept the displayed value.
5. You are prompted to enter your age.
- Use the 0...9 keys to enter your age, or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed value in 1 year increments.
  - When your correct age has been entered, press the OK key to accept the displayed value.
6. You are prompted to enter an upper heart rate limit. The Stepper displays a default upper heart rate limit that is based on 80% of your theoretical maximum heart rate (220 BPM - age). You may enter any value from 90 to 200 BPM.
- Use the 0...9 keys to enter an upper heart rate limit, or press the ▲ or ▼ key, as desired, to increase or decrease the heart rate limit in 1 BPM increments.
  - When the desired upper heart rate limit has been entered, press the OK key to accept the displayed value.
7. You are prompted to enter a lower heart rate limit. The Stepper displays a default lower heart rate limit that is based on 60% of your theoretical maximum heart rate (220 BPM - age). You may enter any value from 70 BPM to 20 BPM less than the upper heart rate limit set in step 6.
- Use the 0...9 keys to enter a lower heart rate limit, or press the ▲ or ▼ key, as desired, to increase or decrease the heart rate limit in 1 BPM increments.
  - When the desired lower heart rate limit has been entered, press the OK key to accept the displayed value.
8. If desired, you can use the personal fan during your workout (see “Using the Personal Fan” for details).
9. You can scroll through workout data during the program (see “Viewing Workout Data During a Program” for details).
10. If you wish to pause the program, stop stepping. The Stepper will enter pause mode and display your workout results for one entire cycle.
11. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see “Cooldown Cycle” for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire.

#### **To operate the CONSTANT HEART RATE Control program:**

This heart rate feature is designed to maintain your heart rate at a constant level by controlling the difficulty level and prompting you to step at a specified speed. Please note that your heart rate may vary above and below your target heart rate during this program.
















1. Mount the Stepper, begin stepping, and press the  key.
2. You are prompted to select the desired HR TRAINING program. Press the 2 key to select Constant Heart Rate Control.
3. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the 0...9 keys to enter your current weight; or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the OK key to accept the displayed value.
4. You are prompted to enter a time goal. The Stepper displays a default time of 20 minutes, or equal to the time parameter set in Manager/Maintenance Mode if less than 20 minutes. You may enter any time from 1 to 99 minutes.
  - Use the 0...9 keys to enter the desired time goal, or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed value in 1 minute increments.
  - When your desired time goal has been entered, press the OK key to accept the displayed value.
5. You are prompted to enter your age.
  - Use the 0...9 keys to enter your age, or press the ▲ or ▼ key, as necessary, to increase or decrease the displayed value in 1 year increments.
  - When your correct age has been entered, press the OK key to accept the displayed value.
6. You are prompted to enter a target heart rate. The Stepper displays a default target heart rate that is based on 70% of your theoretical maximum heart rate (220 BPM - age). You may enter any value from 70 to 200 BPM.
  - Use the 0...9 keys to enter your target heart rate, or press the ▲ or ▼ key, as desired, to increase or decrease the target heart rate in 1 BPM increments.

- When the desired target heart rate has been entered, press the  key to accept the displayed value.
- 7. If desired, you can use the personal fan during your workout (see "Using the Personal Fan" for details).
- 8. You can scroll through workout data during the program (see "Viewing Workout Data During a Program" for details).
- 9. If you wish to pause the program, stop stepping. The Stepper will enter pause mode and display your workout results for one entire cycle.
- 10. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see "Cooldown Cycle" for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire.

## FITNESS TEST

The FITNESS TEST program is designed to gradually elevate your heart rate to the upper end of your training range. The program begins with a three minute warm up cycle. Upon completion of the three minute warm up cycle, your heart rate is read and recorded. Based on this heart rate level the test progresses to the second stage, which correlates to your heart rate. This stage is one minute long. This procedure continues until two steady-state heart rates are obtained between 115-150 bpm. Upon completion of the test, your  $\text{VO}_{2\text{ max}}$  is displayed in METS and in  $\text{mL}\cdot\text{kg}^{-1}\cdot\text{min}^{-1}$ . Based on your  $\text{VO}_{2\text{ max}}$  score, your fitness level is also be displayed.

### To operate the Fitness Test program:

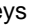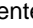1. Mount the Stepper, begin stepping, and press the  key.
2. You are prompted to select the desired HR TRAINING program. Press the  key to select Fitness Test.
3. You are prompted to enter your weight. The Stepper displays a default weight as set in Manager/Maintenance Mode. You may enter any weight from 1 to 350 pounds (1 to 158 kg).
  - Use the ... keys to enter your current weight; or press the  or  key, as necessary, to increase or decrease the displayed weight in 1 pound (or 1 kg) increments.
  - When your correct weight has been entered, press the  key to accept the displayed value.
4. You are prompted to enter your gender. Press the  key for male and the  key for female.
  - When your correct gender has been entered, press the  key to accept the displayed value.
5. You are prompted to enter your age.
  - Use the ... keys to enter your age, or press the  or  key, as necessary, to increase or decrease the displayed value in 1 year increments.
  - When your correct age has been entered, press the  key to accept the displayed value.
6. If desired, you can use the personal fan during your workout (see "Using the Personal Fan" for details).
7. You can scroll through workout data during the program (see "Viewing Workout Data During a Program" for details).
8. If you wish to pause the program, stop stepping. The Stepper will enter pause mode and display your workout results for one entire cycle.
9. When you have reached your workout goal, the Stepper enters the Cooldown cycle (see "Cooldown Cycle" for details). If you wish to exit the program before you have reached your workout goal, stop stepping and allow the Pause timer to expire.

# PREVENTATIVE MAINTENANCE

With durable, high performance components, the **STAR TRAC E-ST STEPPER** is designed for heavy usage with minimal maintenance required. To keep your Stepper in top condition, Star Trac strongly recommends performing the regular daily, weekly and monthly preventive maintenance routines outlined below. Any unusual symptoms, such as a loud continuous noise during operation, should be reported to **STAR TRAC PRODUCT SUPPORT DEPARTMENT** at (800) 503-1221, or USA 1-714-669-1660.

## DAILY MAINTENANCE

- Remove excessive accumulations of dust, dirt, and other substances by using a clean, soft cloth and a non-abrasive liquid cleaner, such as Formula 409™ or FANTASTIK™. Wipe down the exterior of the display panel, hand rails, pedals, shrouds and heart rate grips.

**NOTE:** DO NOT spray the cleaner directly onto the Display Panel or heart rate grips.

## WEEKLY MAINTENANCE

Perform the following services each week:

- Vacuum the floor under and around the Stepper. Move the Stepper to another spot, if necessary, to vacuum thoroughly.
- Inspect the Display Panel mounting screws for security, and retighten if necessary.
- Inspect the Display Panel keypads for wear.

## MONTHLY MAINTENANCE

Perform the following services each month, or as needed:

- Check that the pedals and shrouds are secure.
- Check the hand rails for looseness. Tighten screws as necessary.
- Check for smooth and quiet operation of all moving parts.

# MANAGER / MAINTENANCE MODE

After using your **STAR TRAC E-ST STEPPER** for a period of time, you may wish to change some of its settings.

## MANAGER MODE

The Manager Mode lets you query and modify the basic settings of your Stepper. To enter Manager Mode:

1. Press and *hold* the 0, 1 and OK keys together.
2. A beep will sound and "MANAGER MODE" will display momentarily in the Information Window.
3. Release all keys. "SERIAL NO #####" will display in the Information Window.

**NOTE:** The system will automatically exit Manager Mode if no key is pressed for 30 seconds.

The following keys are used to modify settings in MANAGER MODE:



**Upper and Lower Data Information Window SCROLL Keys:** Display the next and previous parameters, respectively.



**Increase and Decrease LEVEL Keys:** Adjust the value of the displayed parameter up and down, respectively, in increments of 1 unit. These keys *do not* save the new value - see **OK Key** below.



**Numeric Keypad:** Allows you to enter specific values for numeric parameters. These keys *do not* save the new value - see **OK Key** below.



**OK Key:** Updates (saves) the values of all parameters in non-volatile memory, and exits Manager Mode.

**NOTE:** To exit Manager Mode without saving any values or settings, press the QUICK START key.

The items that you may display and change with the previous keys are:

Item	Lowest Value	Highest Value	Default Value	Meaning
Serial No	0	65535	0	Serial number (set by factory)
Date	01/00	12/99	01/05	Manufacture date for the Stepper (set by factory)
Display Vers 1	01.00	99.99	N/A	Display panel software version (set by factory)
Display Vers 2	01.00	99.99	N/A	Display panel software version (set by factory)
LCB Vers	01.00	99.99	N/A	Display panel software version (set by factory)
Units	English	Metric	English	English = units of pounds, feet, Metric = units of kilograms, meters
Time	5	99	99	Maximum time in minutes allowed for program, excluding cool-down.
Weight	1 (Lb) 1 (KG)	350 (Lb) 158 (KG)	155 lbs 70 (KG)	Default (to user), typical weight in lb (UNITS=English), or kg (UNITS=Metric).
Language	N/A	N/A	ENGL	Language is English (ENGL), Dutch (DUTC), French (FREN), German (GERM), Portuguese (PORT), Spanish (SPAN), Swedish (SWED), Italian (ITAL) or Katakana (KATA).

## MAINTENANCE MODE

Your Service Representative may need to check accumulated data about the past usage of your **STAR TRAC E-ST STEPPER**, test its display controls, or investigate error messages. For these reasons, your Stepper is equipped with a Maintenance Mode. The Maintenance Mode includes all of the items available through Manager Mode, plus additional items for Service and Diagnostic use. To enter Maintenance Mode:

1. Press and *hold* the 0, 2 and OK keys together.
2. A beep will sound and “MAINTENANCE MODE” will display momentarily in the Information Window.
3. Release all keys. “SERIAL NO #####” will display in the Information Window.

The following keys are available in MAINTENANCE MODE:



**Upper and Lower Data Information Window SCROLL Keys:** Display the next and previous parameters, respectively. Keys will repeat if held.



**Increase and Decrease LEVEL Keys:** Adjust the value of the displayed parameter up and down, respectively, in increments of 1 unit. These keys *do not* save the new value - see **OK Key** below.



**Numeric Keypad:** Allows you to enter specific values for numeric parameters. These keys *do not* save the new value - see **OK Key** below.



**OK Key:** Updates (saves) the values of all parameters in non-volatile memory, and exits Maintenance Mode.

**NOTE:** To exit Maintenance Mode without saving any values or settings, press the QUICK START key.

The items that you may display and change with the previous keys are:

Item	Lowest Value	Highest Value	Default Value	Meaning
Serial No	0	65535	0	Serial number (set by factory)
Date	01/00	12/99	01/05	Manufacture date for the Stepper (set by factory)
Display Vers 1	01.00	99.99	N/A	Display panel software version (set by factory)
Display Vers 2	01.00	99.99	N/A	Display panel software version (set by factory)
LCB Vers	01.00	99.99	N/A	Load Control Board software version (set by factory)
Units	English	Metric	English	English = units of pounds, feet, Metric = units of kilograms, meters
Time	5	99	99	Maximum time in minutes allowed for program, excluding warm-up and cool-down.
Weight	1 (Lb) 1 (KG)	350 (Lb) 158 (KG)	155 lbs 70 (KG)	Default (to user), typical weight in lb (UNITS=English), or kg (UNITS=Metric).
Language	N/A	N/A	ENGL	Language is English (ENGL), Dutch (DUTC), French (FREN), German (GERM), Portuguese (PORT), Spanish (SPAN), Swedish (SWED), Italian (ITAL) or Katakana (KATA).
Model	N/A	N/A	STEPPER	BIKE = Upright Bike / Upright Recumbent TBT = Total Body Trainer STEPPER = STEPPER
LCB TYPE	N/A	N/A	VER3	Type of LCB detected by display.
CSAFE	N/A	N/A	OFF	Turns on/off CSAFE functionality.
PVS	N/A	N/A	OFF	ATSC/NTSC or PAL/SECAM, RF signal.
Wall Power	N/A	N/A	OFF	Turns the wall power setting on/off.
AUTO FAN	OFF	ON	ON	Turns on the FAN one minute into the program.
OPER Hours	0	65535	0	Total operating hours.
Quick Start	0	65535	0	Number of times the Quick Start program was run since last reset.
Manual	0	65535	0	Number of times the Manual program was run since last reset.
Fat Burner	0	65335	0	Number of times the Fat Burner program was run since last reset.
IHR Prog	0	65535	0	Number of times the Interval Heart Rate Control program was run since last reset.
CHR Prog	0	65535	0	Number of times the Constant Heart Rate Control program was run since last reset.
Fit Test	0	65535	0	Number of times the Fitness Test program was run since last reset.
Glt Sculpt	0	65535	0	Number of times the Glute Sculptor program was run since last reset.
Thigh Tnr	0	65535	0	Number of times the Thigh Toner program was run since last reset.
Famous Stp	0	65535	0	Number of times the Famous Steps program was run since last reset.
Comm Lost	0	65535	0	Number of times a "Communication Lost" condition occurred since last reset.
Key Down	0	65535	0	Number of times a "Key Down" condition occurred since last reset.
LED Test	N/A	N/A	N/A	Access to integral LED test function (for use by authorized Maintenance Technician).
Keypad Test	N/A	N/A	N/A	Access to integral keypad test function (for use by authorized Maintenance Technician).
Heart Rate Test	N/A	N/A	N/A	Access to integral heart rate system test function (for use by authorized Maintenance Technician).
Fan Test	N/A	N/A	N/A	Access to integral fan test system test function (for use by authorized Maintenance Technician).
CSAFE Test	N/A	N/A	N/A	Access to integral CSAFE test system test function (for use by authorized Maintenance Technician).
Measurements	N/A	N/A	N/A	Access to integral Measurements function (for use by authorized Maintenance Technician).

# **TROUBLESHOOTING**

**STAR TRAC E-ST STEPPERS** perform a self-test at the beginning of every workout. If a problem is detected, a message displays before or after the workout, depending on the nature of the problem. Star Trac recommends that you refer your questions about your **STAR TRAC E-ST STEPPER** operation and suspected malfunctions to Star Trac's Service Hotline at (800) 503-1221, or USA 1-714-669-1660.

## **SERVICE MESSAGES**

The following messages are displayed if the associated problem is detected during self-test.

- **Key Down** - One or more keys on the display panel are stuck in the "on" position. This can occur if a user presses keys before the system is turned on, or if a key is held down for more than 10 seconds. Call Star Trac Product Support for assistance if the **Key Down** message continues to display.

## **REGULATORY INFORMATION**

This section provides regulatory and safety information pertaining to the **STAR TRAC E-ST STEPPER**.

### **FCC AND OTHER DOMESTIC REGULATIONS**

The Stepper has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of FCC rules. Under FCC guidelines, operation is subject to the following two guidelines: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The Stepper generates and uses radio frequency energy. If the product is not installed and used in accordance with the instructions provided in the owner's manual, interference with radio communications may occur. Likewise, if unapproved accessories are installed, interference with radio communications may occur. The intent of the FCC class A limit is to provide reasonable protection against harmful interference in a commercial installation. However, there is no guarantee that interference may not occur in a specific installation. In the event that interference is experienced, turn off the unit to verify that it is the source. If the interference clears with the unit off, then try each of the following measures and combinations thereof:

- Reorient or relocate the Stepper.
- Reorient or relocate the receiving antenna for your television, radio or VCR.
- If using the wall outlet option, connect the unit to a different power outlet.
- Contact Star Trac Product Support, your authorized dealer, or a qualified radio/television technician for help.

This product has also been tested to meet the following standards:

- UL 1647 (1997) Motor Operated Massage and Exercise Machines

### **CANADIAN DOC AND OTHER REGULATIONS**

This class A digital apparatus meets all requirements of the Canadian Interference Causing Equipment Regulations.

This product has also been tested to meet the following standards:

- CSA C22.2 No 0-M91 General Requirements
- CSA C22.2 No. 68-92 Motor Operated Appliances

### **EUROPEAN APPLICATIONS**

This product has been tested to the following standards:

- EN 60335-1:1995 Safety of household and similar electrical appliances Part 1: General requirements
- EN 61000-6-1:2001 EMC Generic standards - Immunity for residential, commercial and light-industrial environments
- EN 61000-6-3:2001 EMC Generic standards - Emissions standard for residential, commercial and light-industrial environments
- EN 957-1 Safety of Machinery





STAR TRAC  
14410 Myford Road  
Irvine, California 92606  
Telephone: (800) 228-6635, (714) 669-1660  
Fax: (714) 508-3303  
<http://www.startrac.com>